





\*Extra to standard components supplied by Lockwood.

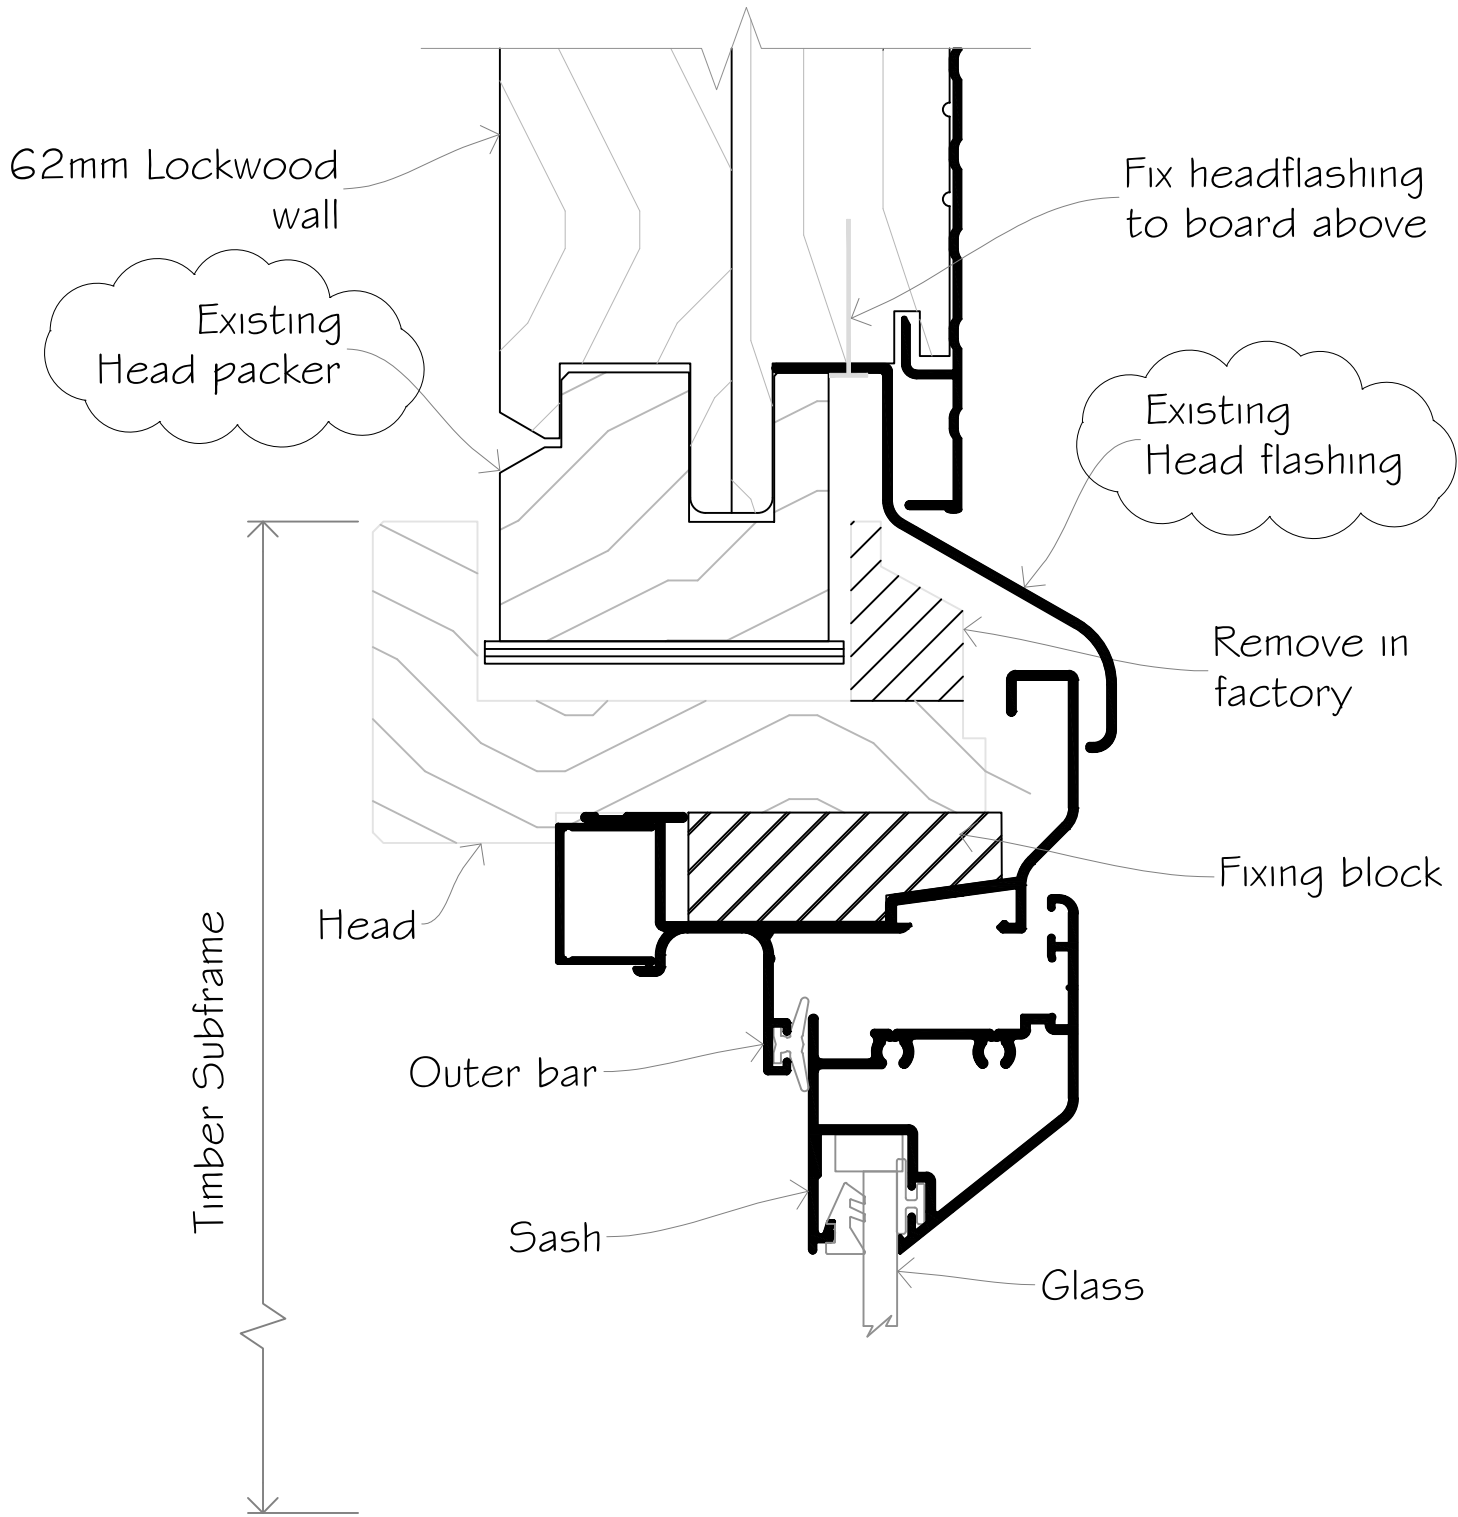

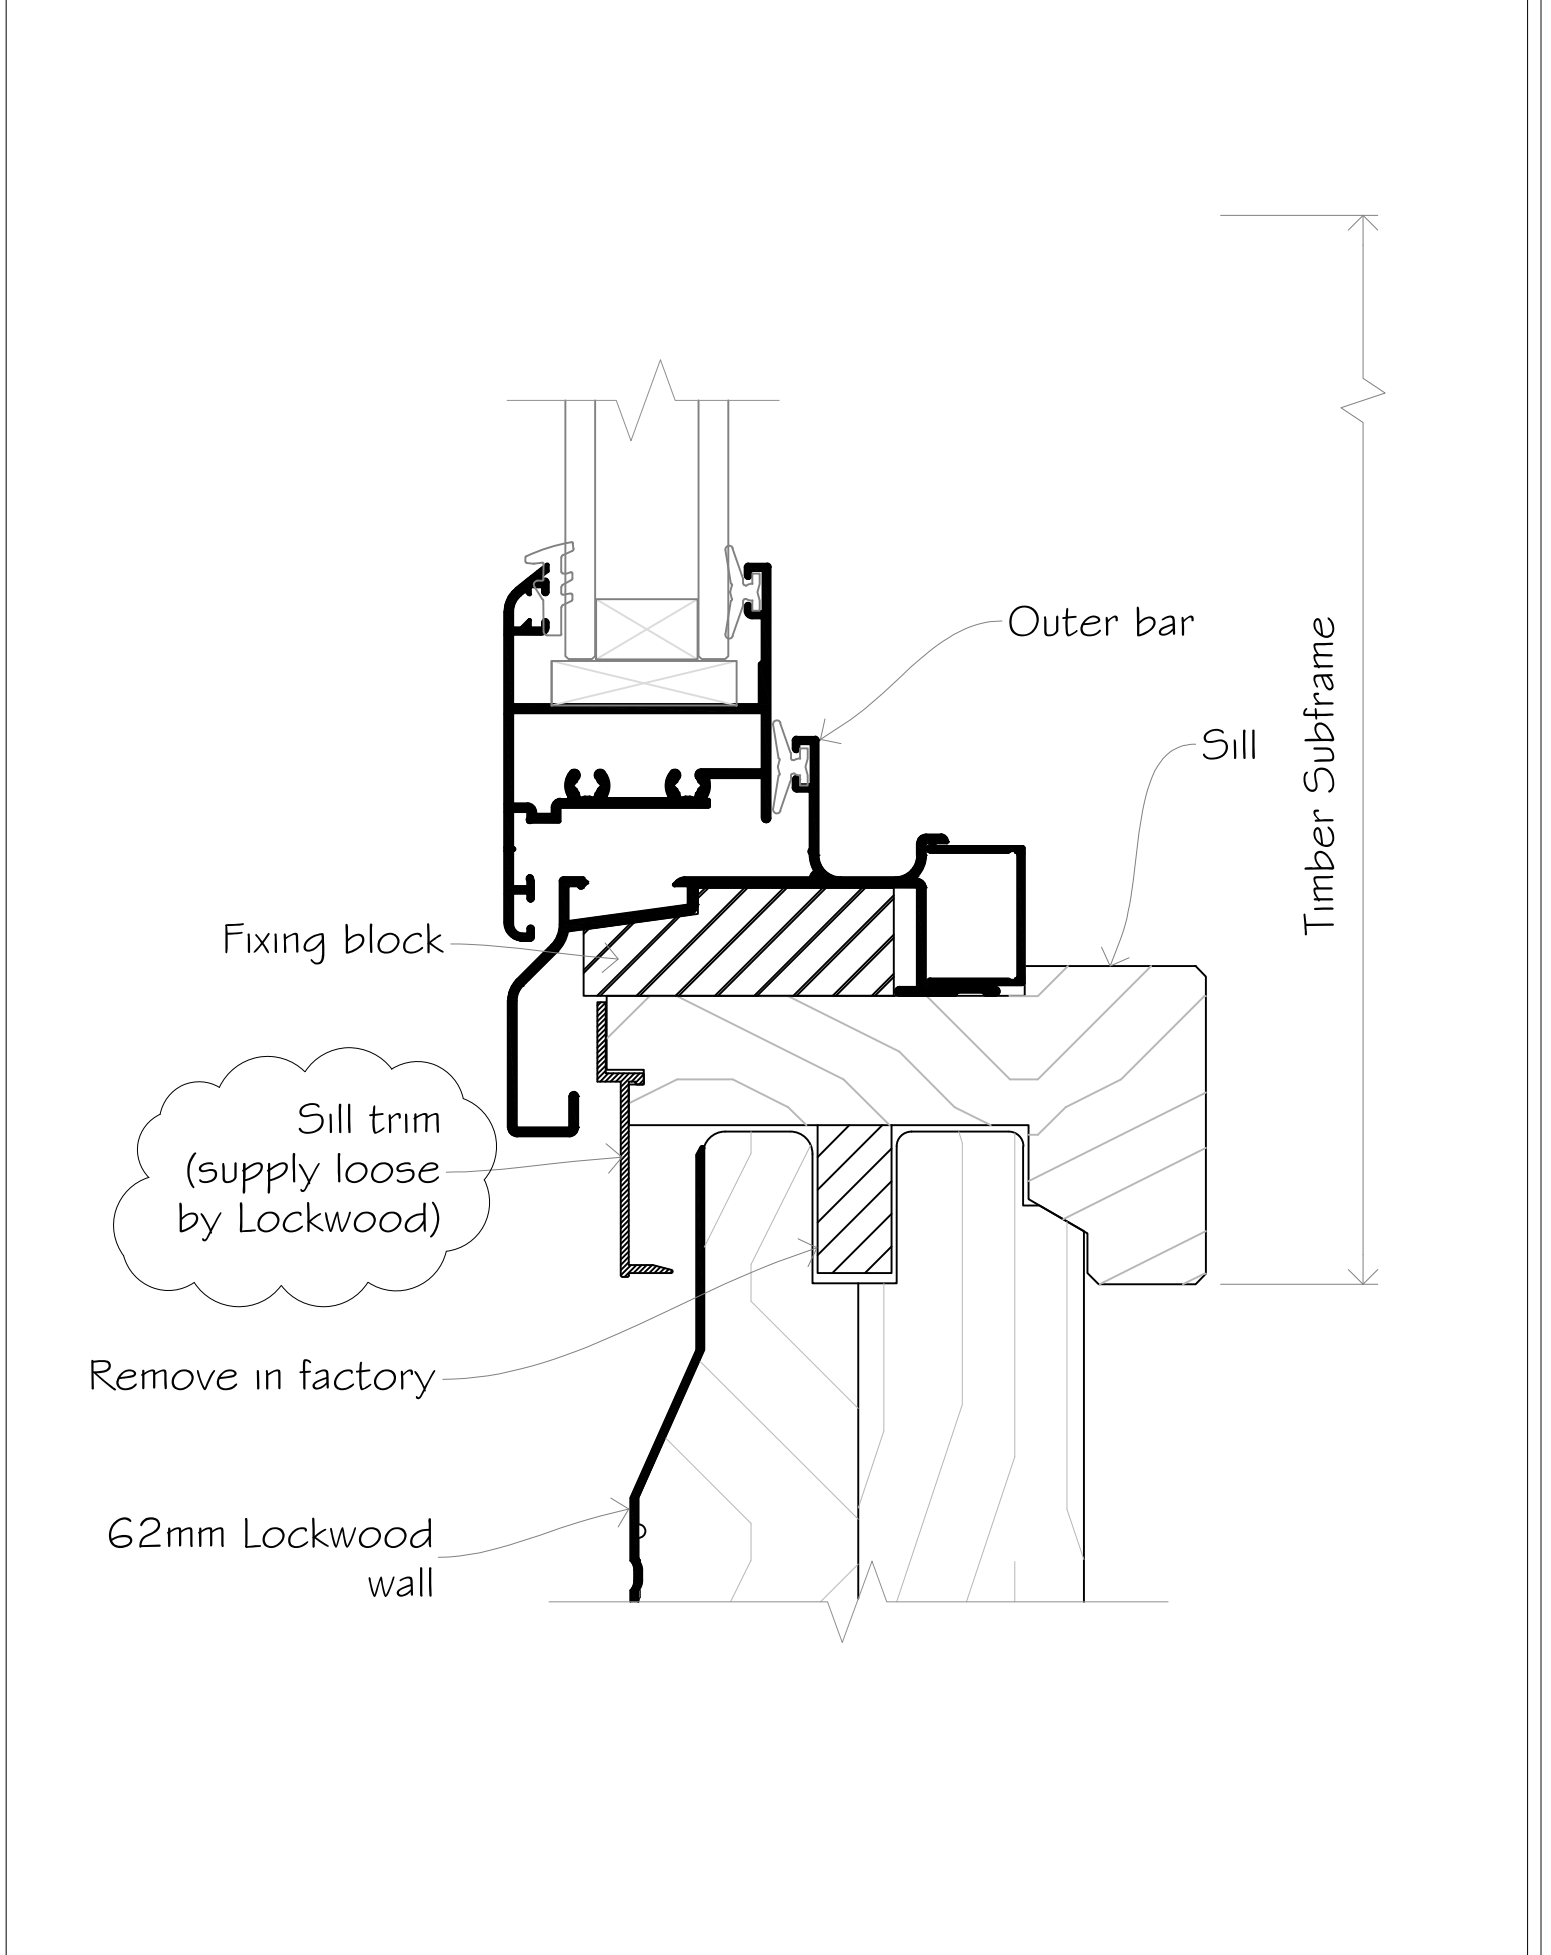

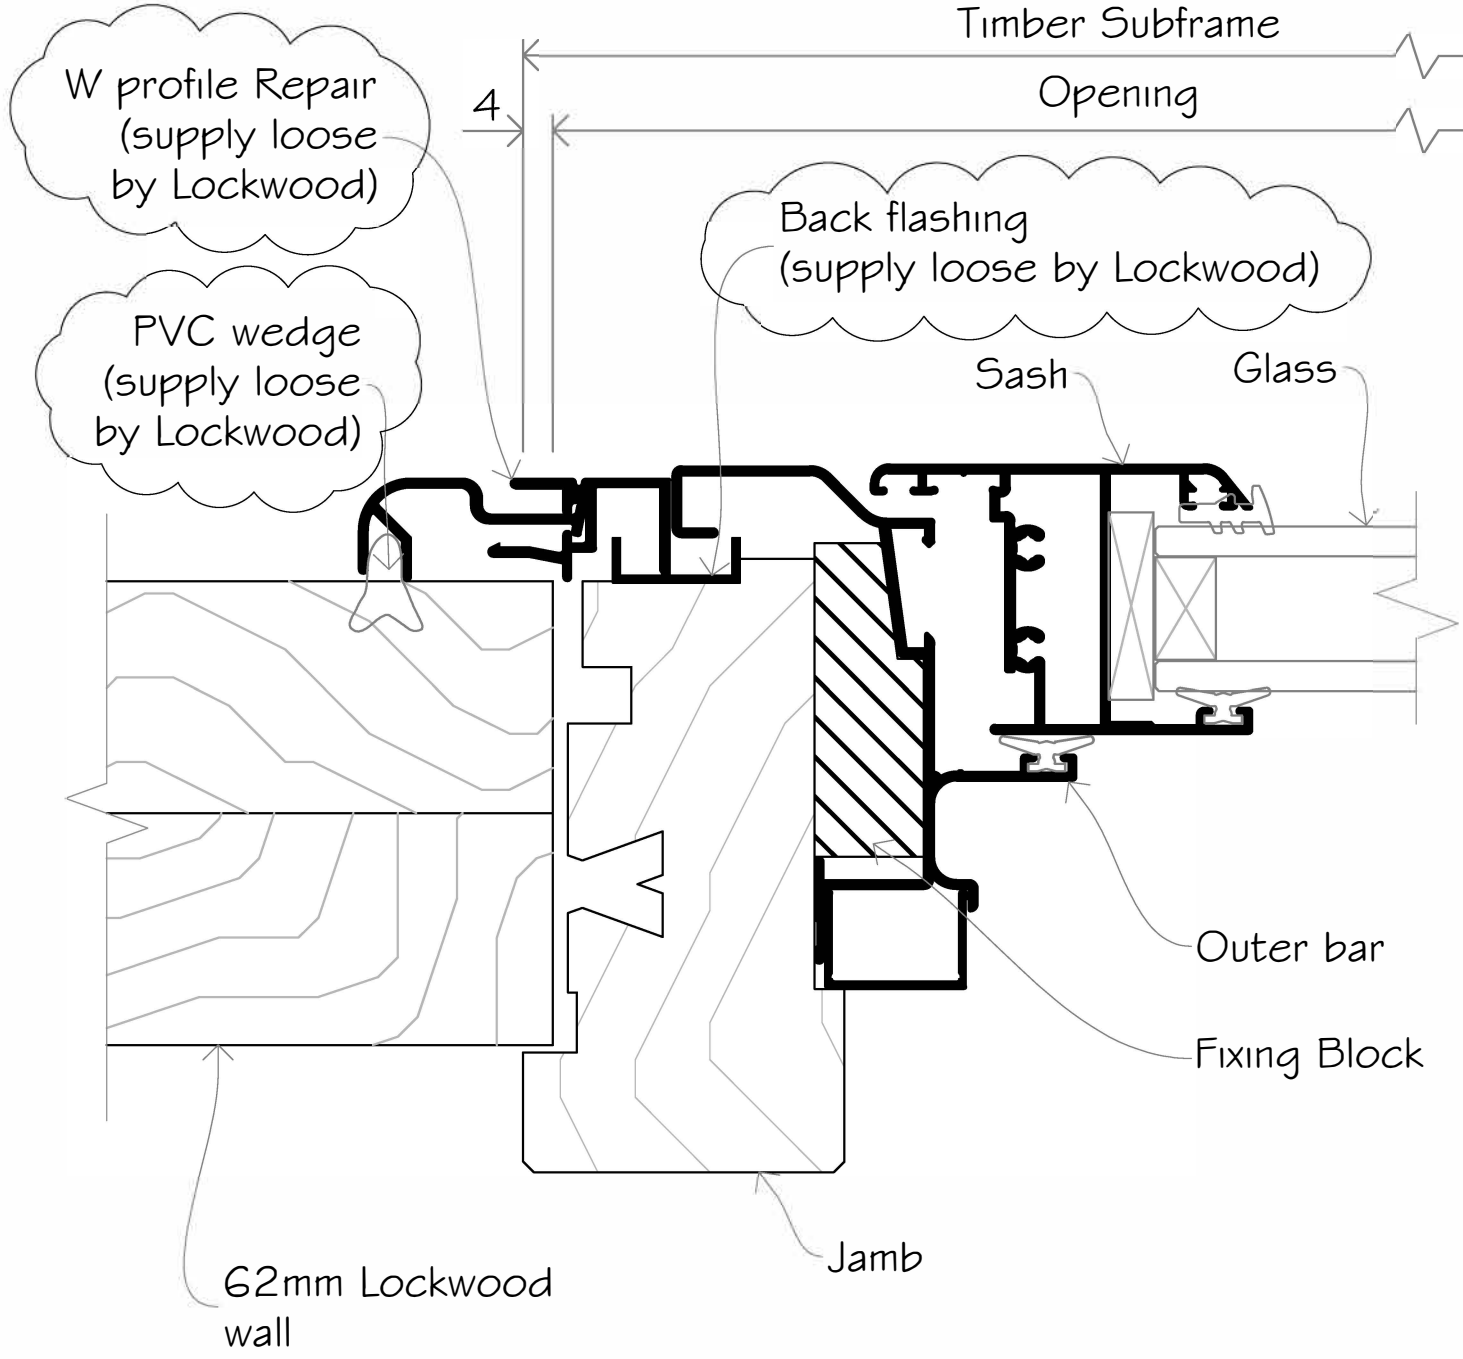

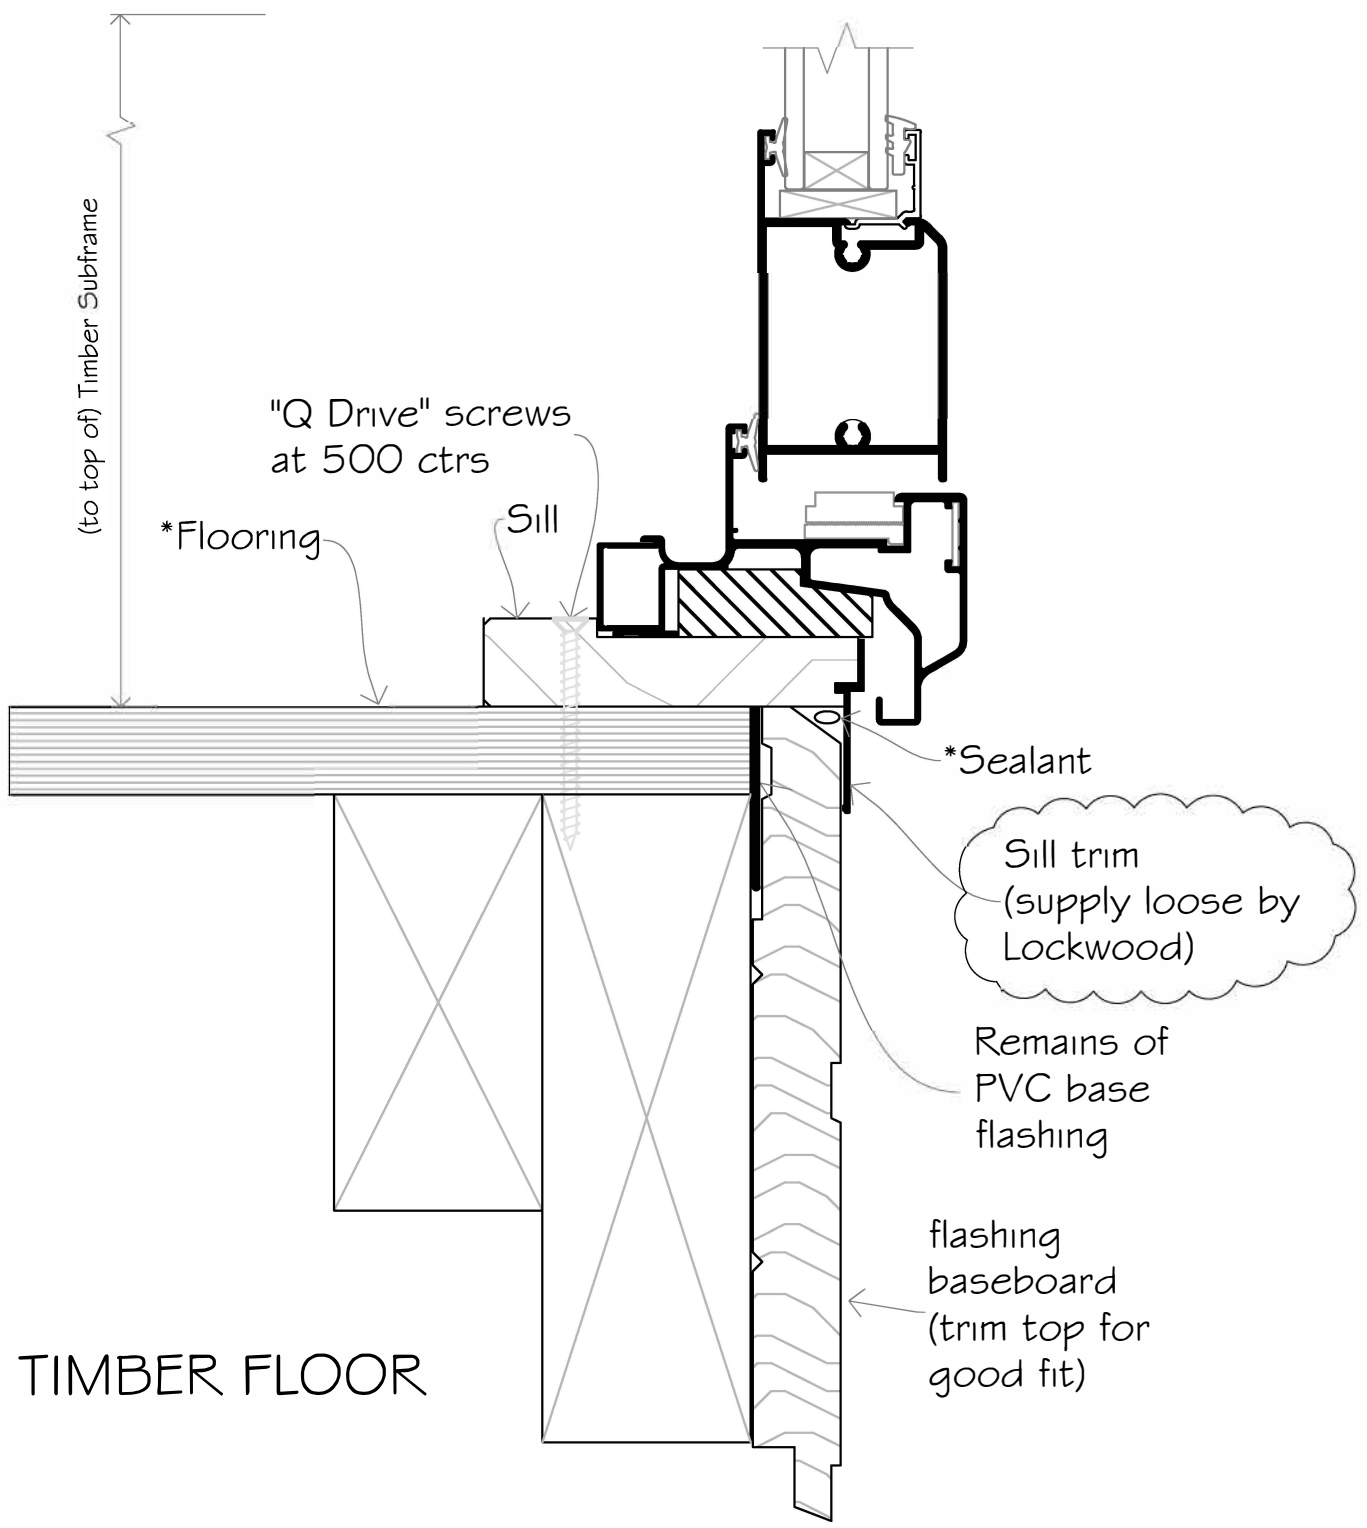

## Retro Fit Joinery Installation

<b>Once the new frame arrives:</b>	
1.	Remove the existing frame to expose the opening
	Existing Head flashing and Head packers are to remain in place
2.	If the new frame is full height:
	Trim the opening to floor level
	Trim flashing baseboard (as detailed)
3.	Prepare to fit the new frame into position
4.	Insert the new frame
5.	Fix frame to the side walls and the floor (if full height frame)
6.	Apply Sealant as detailed
7.	Attach accessories (follow details)
	Back flashing to the side of exterior jambs
	Fit W repairs to cover Back flashing
	Fix PVC wedges to W repairs