LOCKWOOD
Designed for good

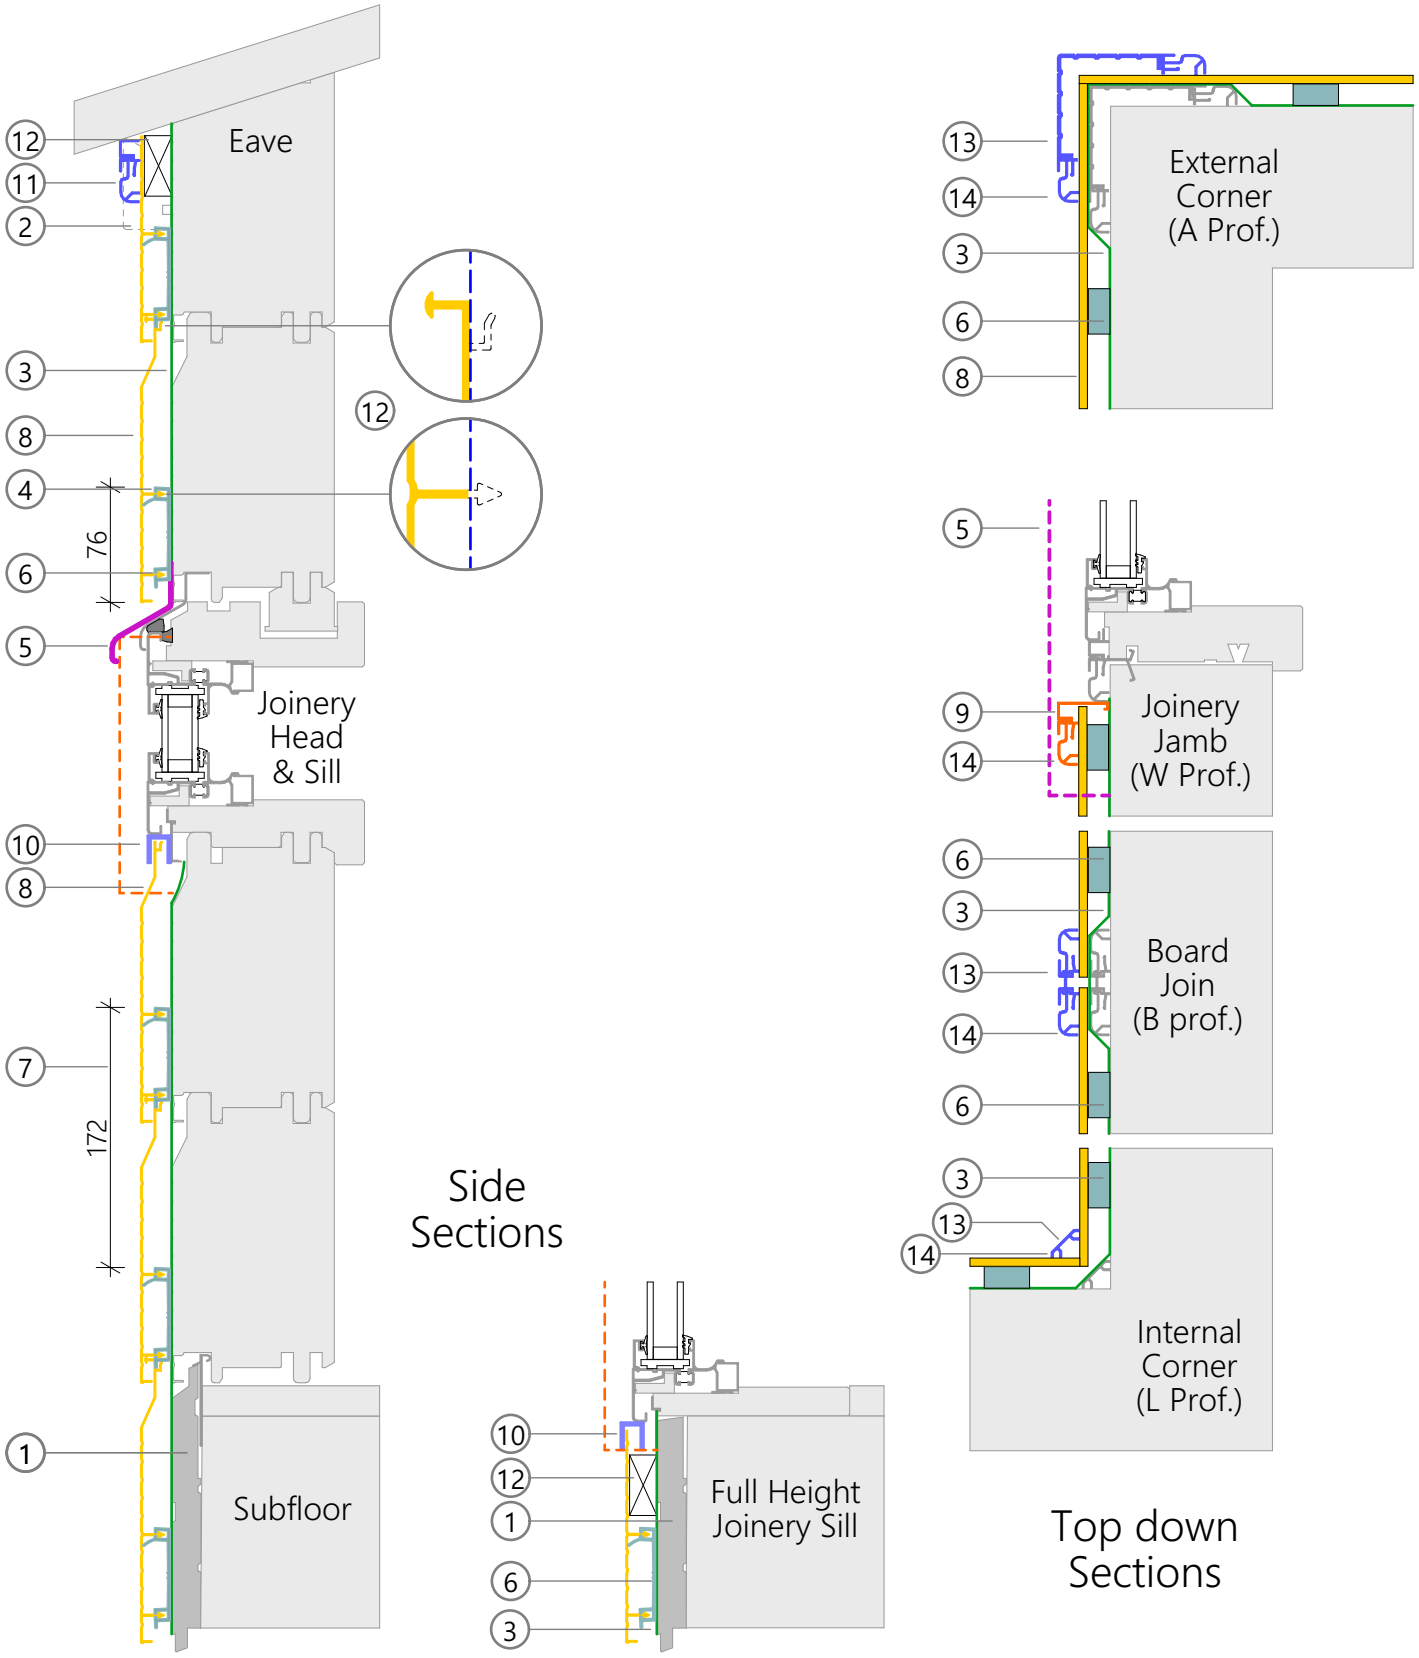

1. Replace old Timber Baseboards where required
2. Remove existing Gable Scotia
3. Building Paper over Existing Wall
4. String line 76mm from bottom of Lintel Board
5. New 3-Fold head flashing installed over existing
6. Top of PVC Clips aligned to string line - Clips at 600mm ctrs
7. Clip lines set out vertically at 172mm ctrs
8. WeatherClad
9. Long Leg W Profiles outside of existing Window Jambs
10. WC Trimmed under windows to fit U-Channel
11. Short Leg W Profile to replace Gable Scotia
12. Trim Weatherclad where required, Pack to suit
13. New Corner and Jointer Profiles over existing
14. PVC Wedges to all new vertical profiles

Date: Monday, 5 October 2026 3:37 pm
Drawn: Lockwood Design Studio

WeatherClad Details - 107 Alum
1:5 @ A4

Sheet No.
WC24

© All plans copyright Lockwood.